


This set includes a foot holder, three feet and a quilting plate :

- ① Closed-toe foot (shown with foot holder)
- ② Open-toe foot
- ③ Clear view foot
- ④ Quilting plate



①



②



③




④

Attaching the quilting plate :


Raise the needle and presser foot.
Attach the quilting plate to the needle plate.
The arrow head (A) should face away from you.

*Use with the feed dog
in the up (normal) position.

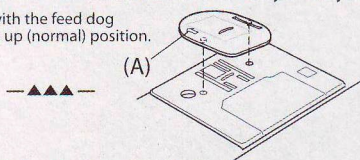


Attaching the foot holder :

Remove the foot holder and attach the free motion quilting foot holder.
Make sure that the needle enters the center of the hole in the foot.

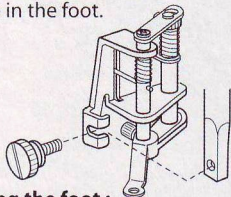


Changing the foot :

Raise the presser bar and turn the round nut (B) to bring the foot to the lowest position.
Remove the setscrew (C) and remove the foot.
Attach the desired foot and secure it with the setscrew.

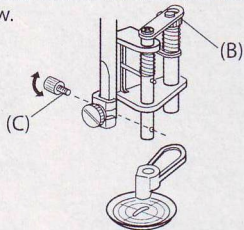

Adjusting the height of the foot :

Lower the presser bar.
Adjust the height of the foot by turning the round nut (B) until the bottom of the foot barely touches the top of the quilt layers.

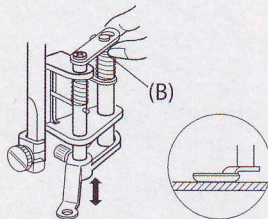

Machine settings :

Stitch : Straight Stitch

(center needle position only)

Thread tension : Auto or 2-5

Feed dog : Raised

Attach the quilting plate

NOTE : The clear view foot can be used for zigzag stitches.

Sew at medium speed while guiding the quilt layers with your hands.

Move the quilt layers 3 mm (1/8") or less per stitch.

CAUTION :

Do not select any pattern other than the straight stitch with center needle position when the closed-toe foot or open-toe foot is attached.
Do not turn the handwheel when the foot is raised.

NOTE : Use the optional Bobbin Holder for Free Quilting with this foot set.